

Comdial DSU Time Change

8.7 System Clock

You can program the system clock to maintain current date and time information. The time and date appear on the LCD speakerphone for display.

• **To set the system clock from the attendant's station,**

1. PRESS INTERCOM.
2. DIAL. *#01.
3. DIAL. 2-digits (00-99) for year.
4. DIAL. 2-digits (01-12) for month.
5. DIAL. 2-digits (01-31) for day.
6. DIAL. 2-digits (00-23) for hour.
7. DIAL. 2-digits (00-59) for minutes.
8. PRESS SPEAKER to end.

NOTE – These changes are usually made from the System Operator station or Station 10 or Station 12.