 
 


# Comdial DXP Time Change

## 8.15 System Clock

The system clock provides a date and time for display at LCD speak-  
erphones connected to the system.

• **To program the system clock for current date and time,**

1. PRESS INTERCOM 
2. DIAL #0\*01 
3. DIAL 2-digits (01–12) for month.
4. DIAL 2-digits (01–31) for day.
5. DIAL 2-digits (00–99) for year.
6. DIAL 2- digits (00–23) for hour.
  - Example: 8:15 PM = 2015 (enter 20 for hour).
7. DIAL 2-digits (00–59) for minute.
  - Example: 8:15 PM = 2015 (enter 15 for minute).
8. DIAL # to save.
9. PRESS SPEAKER to end.


 
**NOTE – These changes are usually made from the  
System Operator station**

*The variation shown below is ONLY for the DXP  
systems that are part of the Bogen DCS system.*

## 8.15 System Clock

The system clock provides a date and time for display at LCD speak-  
erphones connected to the system.

• **To program the system clock for current date and time,**

1. PRESS INTERCOM 
2. DIAL #0\*01 
3. DIAL 2-digits (01–12) for month.
4. DIAL 2-digits (01–31) for day.
5. DIAL 2-digits (00–99) for year.
6. DIAL 2- digits (00–23) for hour.
  - Example: 8:15 PM = 2015 (enter 20 for hour).
7. DIAL 2-digits (00–59) for minute.
  - Example: 8:15 PM = 2015 (enter 15 for minute).
8. DIAL # to save.
9. PRESS SPEAKER to end.