

Norstar Telephone System

MICS, CICS, 308 KSU, 616 KSU, 0x32 KSU

Changing the display time & date

Jan 1 12:00Pm Press .

Feature: Press *** * 8 4 6 3**
(which is the same as *** * T I M E**).

Password: Press **2 2 7 4 2** (B A S I C) or
RETRY **2 3 6 4 6** (A D M I N)

Hour:01 Press CHANGE.
NEXT CHANGE


Hour: _ Press the dialpad buttons to enter the hour. Use
CANCL two digits for all hours. The clock on the display shows either one or two digits.

AM The display prompts you to choose a.m. or p.m.
OK CHANGE Press CHANGE and OK to select p.m.

Hour:01 Press NEXT.
NEXT CHANGE

Minutes:00 Press CHANGE.
NEXT CHANGE

Minutes: _ Press the dialpad buttons to enter the minutes.
CANCL

If you are only changing the time and not the date, press  to end your session.

In this example, you are changing the date to July 15, 1998.

Minutes:30 Press NEXT.
NEXT CHANGE

Year:01 Press CHANGE.
NEXT CHANGE

Year: _ Press the dialpad buttons to enter the year.
CANCL

Year:02 Press NEXT.
NEXT CHANGE

Month:01 Press CHANGE.
NEXT CHANGE

 
Month: _ Press the dialpad buttons to enter the month.
CANCL

Use numbers for the months: 01 is January; 12 is December.

Month:07 Press NEXT.
NEXT CHANGE

Day:01 Press CHANGE.
NEXT CHANGE

Day: _ Press the dialpad buttons to enter the day.
CANCL

Day:15 Press  to end your session.
CANCL

End of session